

Programme as Steer axle Lock ,


Output should be at **0v**

In the " Modify" this should be set to " Lock above 16km/h"

" Unlock below 15km/h"

With these settings this means the light is **ON** until the speed of 16km/h is reached then will go **out** .

Once the speed falls below 15km/h the light will be back **on** .

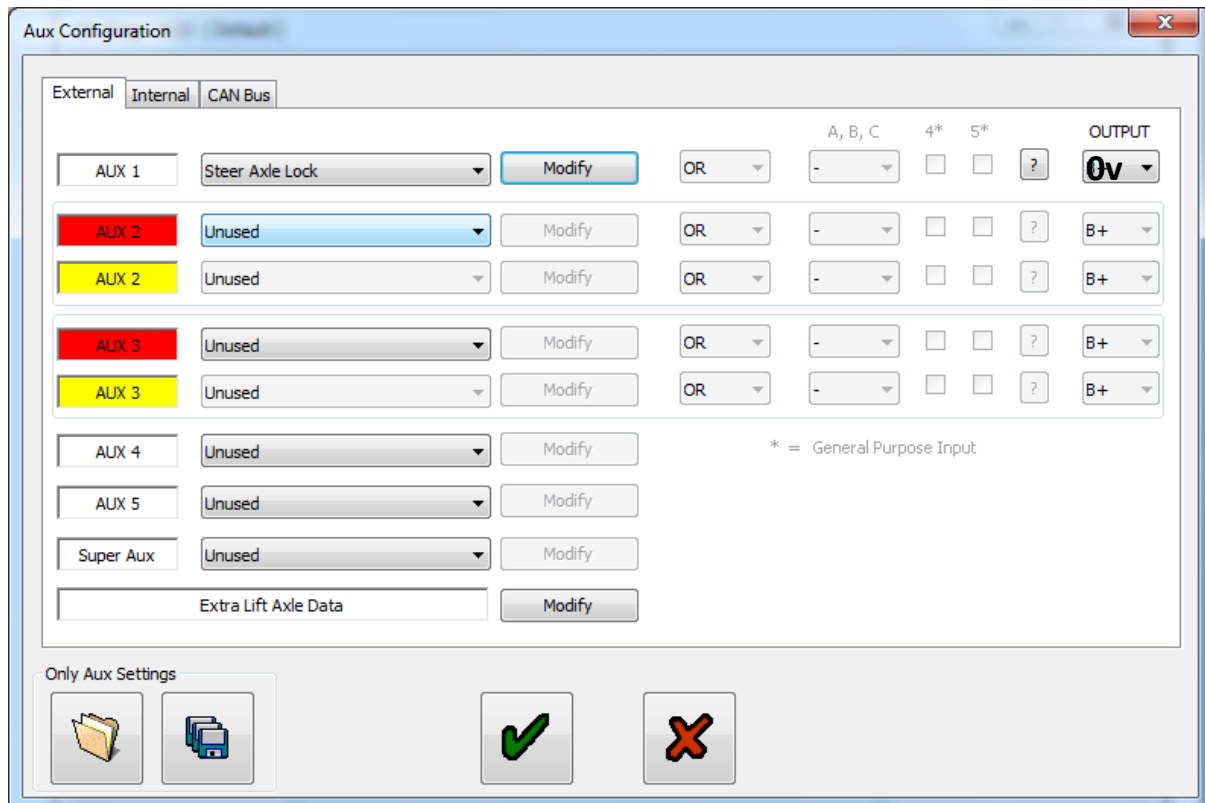

Set to 0v

